

■ Connectable indoor unit list

• This outdoor unit can be connected to these indoor units as shown below.

Type		Model name	Connectable series						
			VRF				HVRF		
			PUHY	PURY	PQHY	PQRY	PUHY	PURY	PQRY
Ceiling Cassette	4-way air flow	PLFY-P VFM*	○	○	○	○	/	/	/
		PLFY-(E)P VEM*	○	○	○	○	/	/	/
	2-way air flow	PLFY-M VEM* ※1	○	○	○	○	/	/	/
		PLFY-P VLMD*	○	○	○	○	/	/	/
	1-way air flow	PMFY-P VBM*	○	○	○	○	/	/	/
Ceiling Concealed		PEFY-P VMR*	○	○	○	○	/	/	/
		PEFY-P VMS1(L)*	○	○	○	○	/	/	/
		PEFY-P VMA(L)*	○	○	○	○	/	/	/
		PEFY-P VMHS*	○	○	○	○	/	/	/
		PEFY-M VMA(L)* ※1	○	○	○	○	/	/	/
	Fresh Air Intake	PEFY-P VMHS-E-F*	○	○	○	○	/	/	/
Ceiling Suspended		PCFY-P VKM*	○	○	○	○	/	/	/
Wall Mounted		PKFY-P VKM*	○	○	○	○	/	/	/
		PKFY-P VLM*	○	○	○	○	/	/	/
Floor Standing/ Floor Mounted Concealed		PFFY-P VKM*	○	○	○	○	/	/	/
		PFFY-P VLEM*	○	○	○	○	/	/	/
		PFFY-P VLRM*	○	○	○	○	/	/	/
		PFFY-P VLRMM*	○	○	○	○	/	/	/
		PFFY-P VCM*	○	○	○	○	/	/	/
Floor Standing		PWFY-(E)P VM* -AU	○	○	○	○	/	/	/
		PWFY-P VM* -BU	-	○	-	○	/	/	/
Ceiling Concealed		PEFY-WP VMS1*	/	/	/	/	-	○	○
		PEFY-WP VMA*	/	/	/	/	-	○	○
		PEFY-W VMS*	/	/	/	/	○	○	○
		PEFY-W VMA(L)*	/	/	/	/	○	○	○
Ceiling cassette		PLFY-WP VBM*	/	/	/	/	-	○	○
		PLFY-WP VFM*	/	/	/	/	-	○	○
		PLFY-WL VEM*	/	/	/	/	○	○	○
		PLFY-WL VFM*	/	/	/	/	○	○	○
Wall Mounted		PKFY-WL VLM*	/	/	/	/	○	○	○
Floor standing		PFFY-WP VLRMM*	/	/	/	/	-	○	○
		PFFY-W VCM*	/	/	/	/	○	○	○

"*" means suffix such as letters or numbers.

※1: The indoor units are connectable for the outdoor units of R410A/R32-VRF system.